 


---

**HABIT**  
*Makes it yours!*  
Instructions for Use

## **DT7 Water cooler**

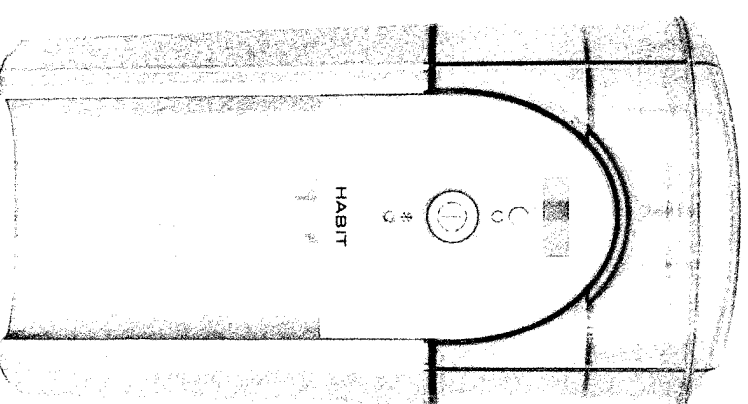


Please read and retain for future reference

# HABIT

*Make it yours!*

## Features

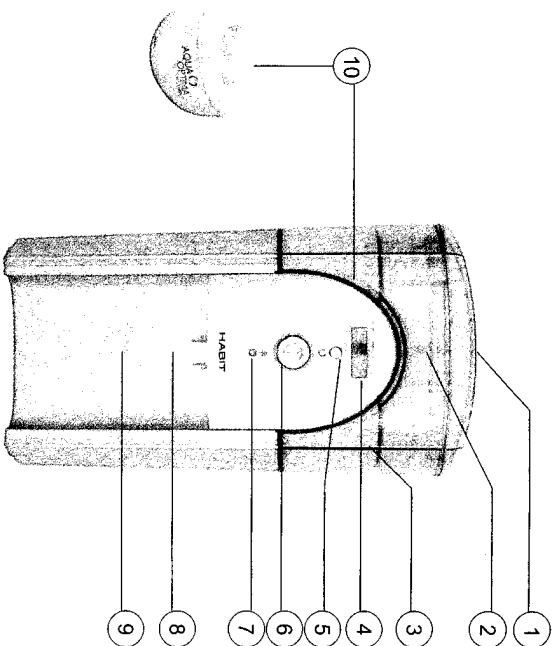

1. Lid
2. 2 Liter upper water tank
3. 5 Liter filtered water tank
4. Filter life indicator
5. Filter life indicator reset button
6. Power on/off button
7. Power on/off and chilling LED indicator (blue)
8. Water dispenser lever
9. 1.2 Liter chilled filtered water tank
10. Aqua optima Double Life water filter

## Before Use


Before using this water cooler, please ensure that you read the following instructions, and flush it through with fresh water several times.

11



# HABIT

*Make it yours!*

1. Remove the water cooler from its gift box. Store the gift box for later use.
2. Check the contents :
  - a. Water filter cooler
  - b. Aqua Optima Double Life water filter
3. Wash the lid and the upper tank in warm mild soapy water, rinse and dry thoroughly. Clean the filtered water tank by putting the system on its side and by using a damp cloth with some mild soap, flush it with water so ensure soap is removed and dry it. Reassemble the tanks as shown on the right.
4. Position the water cooler on a stable flat surface, close to a main power socket, not in direct sunlight and out of reach of children.
5. Make sure that there is a gap at least 5 cm between the ventilation slots on the rear of the water cooler and any wall or surface.
6. Do not plug the unit in or install the filter yet.
7. Remove the lid and pour at least 2.5 liters of tap water into the filtered water tank.

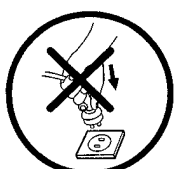

While pouring the water, place a glass under the dispenser and push the lever back to drain the water.

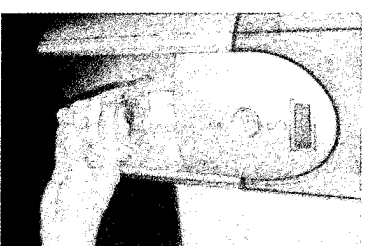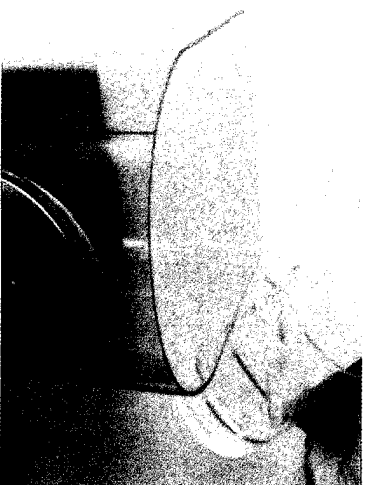

**Note:** Keeping the lever open allows the air in the internal tank to be replaced with water. This means that when the unit is first used water will flow and no air blocks can develop. It may take some time for the water to flow through since the cold water storage tank inside needs to be completely full before you can tap water.

8. Repeat this process again with the same amount of water.

## Filter installation

1. Remove the filter from its wrapping.
2. Immerse the filter into cold water and agitate gently to remove any air bubbles. **Note:** There is no need




12

## HABIT

*Make it yours!*


3. Remove the lid and install the filter into the upper water tank as shown. When correctly fitted, the filter should remain in place when the tank is turned upside-down.
4. Align the wing of filter with the retaining flange of upper water tank. Screw it clockwise with pressure until it is fitted firmly as shown.

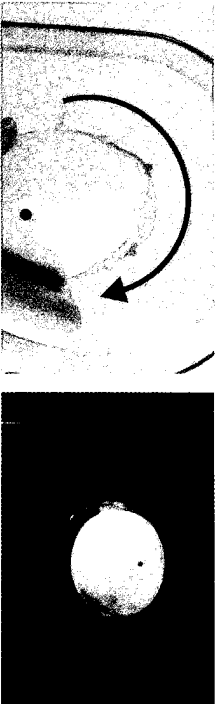

5. The assembled filter as shown in the photo above.
6. Hold the upper tank over a sink, and fill with cold tap water up to " max fill level" and allow it to filter through. Flush the filter and discard the first two fillings. Place the upper tank back into the unit as shown.

There is a minimum fill level mark printed on the filtered water tank, which means when in daily use, you shall fill water to the minimum level otherwise, no water comes out from the faucet. Please refer to the below photo.

When the filter icon on the filter life indicator monitors flashes after 60 days, it means to replace the filter. The used filter may be disposed as household waste.

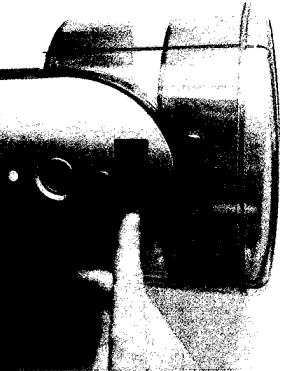

## Using the water cooler

1. Lift the lid and pour water into the upper tank up to the maximum fill level. After a few minutes water will flow through the fast flow water filter into the filtered water tank.
2. Keep adding water until both tanks are full. Water flows through the filter at a set rate. It may take some time to fill all the tanks on first use. During normal use top up the tanks regularly.


**Note:** After the unit has been drained, it is recommended that dispensing lever is hold open with a glass while filling the tanks, to stop air becoming trapped inside the unit. Once water flows through the tap the dispensing lever can be released. If water fails to be dispensed when the

## HABIT

*Make it yours!*

tanks are full refer to " Troubleshooting " on page 15.


3. Close the lid.
4. Plug the unit into the mains and press the on/off switch on the panel. The blue indicator will illuminate as a sign that the system is cooling the water.
5. Dispense 2 liters of water from the unit to remove any unfiltered water and top up.
6. After up to 3 hours, the blue indicator on the panel will change to white indicating the water has chilled to approximately 5 degrees Celsius. The system will stop chilling until the water temperature of the chilled water inside reaches a temperature of 10 degrees Celsius when it will start chilling again.
7. Place a glass under the dispenser and push the lever back to dispense water. Top up the water tank as necessary.

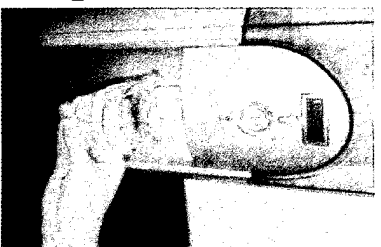


## Using the filter life indicator

Your Double Life water filter should be replaced regularly to enjoy the benefits of Aqua Optima filtered water. The filter life indicator automatically reminds you when your water filter needs to be replaced.

When you have fitted and prepared your water filter, plug the main power and the filter life indicator starts as shown below:

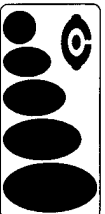

Every 12 days one ellipse will disappear to indicate the remaining filter life. After 60 days the filter icon will start flashing as a signal that the filter must be replaced.

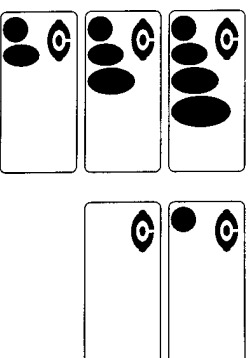

Wash and dry the upper water tank, screw in new filter. (Please refer to the description on how to replace the filter.) To reset the filter life indicator at any time press the reset button for 3 seconds.

**Note:**

- the filter life indicator system is only intended for the Aqua Optima Double Life filters available via HABIT dealers or via [www.purifyh2o.nl](http://www.purifyh2o.nl)
- if the end-user unplugs the unit and leaves it without power for more than 24 hours, the unit will reset the filter life indicator automatically

## To replace the filter

The filter will need to be replaced every 2 months based upon a water consumption of maximum 3,5 liters per day. We advise you to replace the filter every month in case the water consumption is significantly higher than 3,5 liters per day.

1. Switch off the water filter chiller and unplug the main power.
2. Drain the water from the tanks.
3. Remove the lid, and take out the upper water tank.
4. Dispose of the used filter.
5. Clean the lid with warm soapy water, rinse and dry thoroughly.
6. Take out the new filter from its wrapping.
7. Please follow the steps of Filter Installation as shown on page 12.

## Cleaning and storage

The outer casing of your water filter chiller can be cleaned using a soft damp cloth and a non-abrasive cleaner. If you want to clean the inside of the filtered water tank, what we advise you to do once every two filter replacements, drain the inner tank by removing the drain plug underneath the system above the shrink, place the system on its side (make sure it can not be scratched) and clean the inside with a soft brush. Make sure you flush the system before using it as described on page 12.

### Important

If you are not going to use the chiller for an extended time, for example because you go on a holiday, please shut off the power supply, drain the water, remove the filter and discard. Hold the product over a sink while removing the plug underneath the unit. When all the water has drained out of the tank, replace the drain plug and tighten.

## Troubleshooting

**Problem: Water is not dispensed.**

**Possible causes:**

- Make sure that there is water in the filtered water tank.
- Make sure the filter must be immersed in cold water and agitated to remove any air trapped in the filter.
- Filter is blocked. Remove the blockage or replace filter. Air can become trapped in the internal tank. Press the lever until water dispenses.

**Problem: It appears as if the system is leaking**

**Possible causes:**

- The way you tap the water causes a small leakage when removing your glass or cup.
- The drain plug underneath the unit is not placed or not properly tightened causing leakage. Place or tighten the drain plug to stop it from leaking.

## Important safety instructions

Read all the safety instructions before first use.


- Ensure your hands are dry before handling the plug or switching on the chiller.
- Use the chiller on a secure, dry level surface with sufficient space.
- Check the power cord to ensure no damage is evident and any winding. If any defects are found, please contact the Customer Service Center.
- Use this product with the Aqua Optima Double Life filter only.
- Unplug the product from the main power before filling with water, after use and before cleaning.
- Only use professional, authorized technicians to repair this product.
- Ensure the filter is securely positioned.
- Press "Reset" button after each replacement of the water filter.
- Never use the chiller outdoors.
- Never immerse any part of the chiller, cord set or plug in water or any other liquid to protect against electrical hazards.
- Never use harsh, abrasive or caustic cleaners to clean this chiller.
- Never place the chiller on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven
- Never keep the appliance in an environment below 0 degrees Celsius. Water in the unit will freeze and cause damage.
- Never use any attachment or accessory not supplied with the chiller or not recommended by HABIT.
- Never fill the water tank with any liquid other than tap water.

## Warranty

- To be able to process a warranty claim we request you to fill in our warranty registration form via [www.purtyh20.eu](http://www.purtyh20.eu), directly after you have purchased this product. By clicking on "Warranty registration" in the main menu, the registration form is activated. After filling in this registration form you are requested to confirm it after which you will receive a confirmation of your registration per e-mail.
- This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.
- This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions provided, that it is not connected to an unsuitable electricity supply, dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.
- Nothing in this guarantee or the instructions relating to the product excludes, restricts or otherwise affects your statutory rights.
- In line with our policy of continuous development, we reserve the right to change this product, packaging and documentation without notice. This product is manufactured to comply with the radio interference requirements of EEC Directive 2004/108EC.

## Cautions

- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities or lack of knowledge and experience such as children, unless they have been given supervision or instructions how to use the appliance by a person responsible for their safety.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly persons in order to avoid hazard.
- The marking underneath indicates that this product should not be disposed with household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact your dealer where the product was purchased.

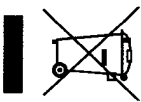

## BUYING NEW FILTERS

The HABIT D17 is equipped with the Aqua Optima Double Life fast flow water filter for highest efficiency. These filters last 60 days for an average household. If the water consumption is significantly higher than 3,5 litres per day we advise you to change the filter every month. The Aqua Optima filter can be purchased from our official HABIT dealer or can be ordered via our website.

**Order Aqua Optima filters on line? Go to [www.purifyh2o.eu](http://www.purifyh2o.eu)**